



### Power Lock II: Changing the lock (Recommended only for dealer)



1. Heat the Power Lock with a heat gun or hair dryer until the locking mechanism can be removed
2. Put a small amount of multi-component adhesive on the area where the Power Lock was just removed
3. Press the new Power Lock firmly onto the pole. The mechanism should fit tightly and not slip
4. Insert the lower or middle section into the section that you have been working with. Now the mechanism has been installed!

**Note:** To exit fullscreen mode press ESC  
In case of any problems with video,  
[please download the latest version of the Adobe Reader](#)